



# WEED BURNER AUSTRALIA

## Weed Burner Instructions

### Models WXT03, WXT04 & WXT08 for LP Gas. Suitable for POL & LCC27 Type Cylinders.

#### Component List

- 1 only Weed Burner with hose assembly with POL Gas cylinder fitting.
- 1 only Instructions

#### Assembly Instructions

Your WXT Series Weed Torch is fully assembled ready to use out of the box. Connect to your gas cylinder with the POL hand-tighten fitting (Left Hand Thread turn anti-clockwise) and ensure it is done up tight. Ensure the handpiece control valve knob is in the off position rotating clockwise until it stops turning. Pressurise the line by turning the gas cylinder valve in an anti-clockwise direction and then back to the off position. Check for leaks before lighting your weed burner.

#### WARNING

**Ensure all joints are correctly tightened and check with soapy lather solution, if bubbles appear at joints whilst under pressure follow assembly instructions again and recheck before operating.**

#### Lighting Instructions

- Open the gas supply cylinder valve between one half and one full turn. Open the handpiece control valve knob anti clockwise just a little (1/2 turn). At the same time lighting the burner by pressing the igniter button continuously on the burner neck until the burner lights.
- Once the burner is lit gently squeeze the trigger and at the same time use the handpiece control valve knob on the hand piece to adjust the flame to the setting you desire. Anti-clockwise to open the valve and clockwise to close the valve. Pulling the lever opens the main gas flow and increases the flame to your setting or right up to full flow. Releasing the lever to reduces it back to the pilot flame.
- When finished turn off the cylinder valve first, allow the flame to burn out before closing handpiece control valve knob ensuring that there is no gas in the hose when it is disconnected.

#### Operating Instructions

- When lit, the burner should be held approximately 60 – 90 cm off the ground and gently pull the lever to increase the gas flame. Wave the burner across the weeds until the green weed leaves show signs of wilting, burn an area of about ½ a square metre at a time. Release the lever to conserve gas when changing areas. When moving onto the next area, always hold the flame away from the hose and cylinder. Then repeat the weeding process.

#### Limited Warranty

- A twelve-month warranty exists from the date of purchase.
- Proof of purchase must be supplied when claiming replacement or repair.
- The warranty only extends to faulty manufacture of the above listed components.
- Weed Burner Australia reserves the right to replace or repair any of the components listed above.

Robert W. Spencer Pty. Ltd. Trading as **Weed Burner Australia**  
ABN 65470052934 Oct 3 2023  
190 Hall Street, Spotswood, Victoria, Australia, 3015  
Phone 03 9399 1077 [sales@weedburner.com.au](mailto:sales@weedburner.com.au)  
[www.weedburner.com.au](http://www.weedburner.com.au)